






## Synchronize Addressable RGB effects with the Motherboard.

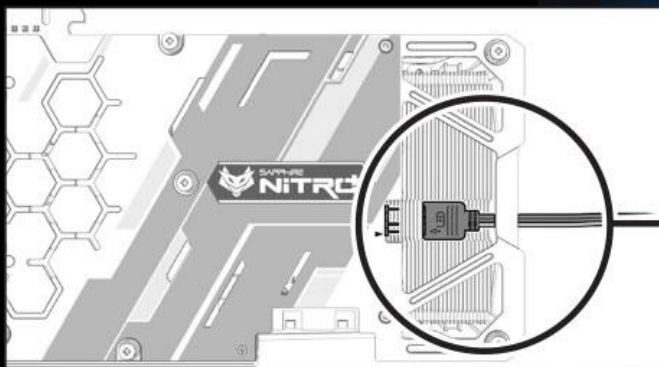

Connect to the reserved 5V RGB 3-pin header on the VGA card with the RGB cable (3-pin).

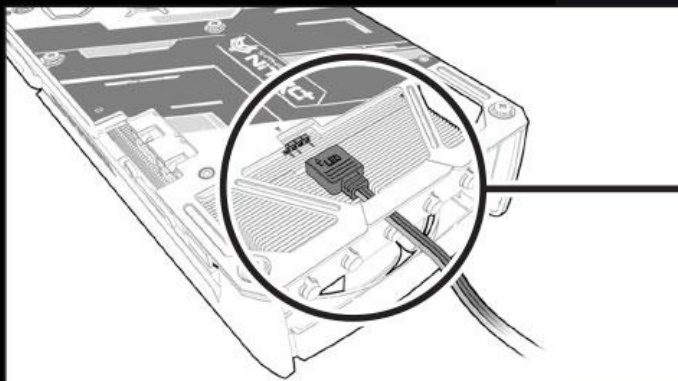

Check the RGB cable is connected properly.

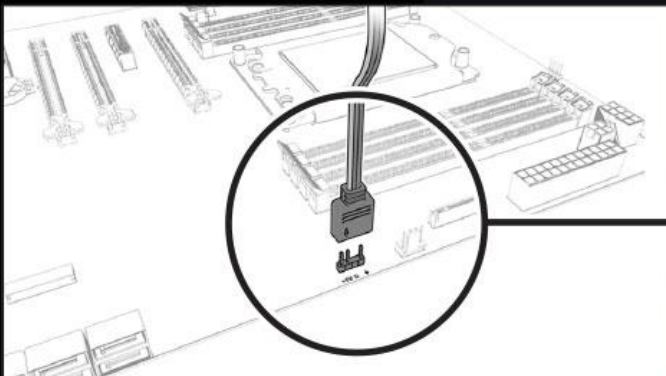

The opposite side of the RGB cable (3-pin) connects to the 5V RGB 3-pin header on the motherboard.